


VKRDF - DUAL BLOCK® regulating ball valve

DUAL BLOCK $^{(\!R\!)}$ regulating ball valve with male ends for socket welding, metric series.



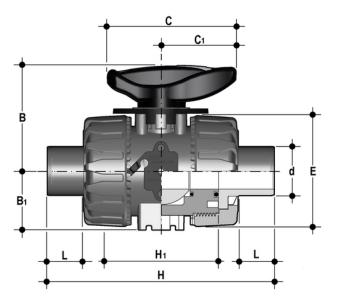

Reference	d	DN	PN	В	B ₁	С	C ₁	Е	Н	H ₁	L	g
VKRDF020F0SF	20	15	16	54	29	65	40	54	124	65	16	299
VKRDF025F0SF	25	20	16	65	34,5	70	49	65	144	70	18	466
VKRDF032F0SF	32	25	16	69,5	39	78	49	73	154	78	20	604
VKRDF040F0SF	40	32	16	82,5	46	88	64	86	174	88	22	951
VKRDF050F0SF	50	40	16	89	52	93	64	98	194	93	23	1284
VKRDF063F0SF	63	50	16	108	62	111	76	122	224	111	29	2229





VKRDF - DUAL BLOCK® regulating ball valve

- $\bullet \ \ \mathsf{HIPVC} \ \mathsf{ergonomic} \ \mathsf{multifunctional} \ \mathsf{handle} \ \mathsf{with} \ \mathsf{\textbf{position}} \ \mathsf{\textbf{indicator}} \ \mathsf{and} \ \mathsf{tool} \ \mathsf{to} \ \mathsf{adjust} \ \mathsf{the} \ \mathsf{ball} \ \mathsf{seat} \ \mathsf{carrier}$
- · Flow direction and opening angle indication plate with graduated scale with 5° detail for clear and accurate readings
- 90° operating angle that permits the use of standard quarter turn actuators
- The patented ball design provides linear flow adjustment throughout its range of operation even when the valve is open just a few degrees and guarantees minimum pressure drops
- Patented DUAL BLOCK® system: prevents union nuts from loosening even under extreme operating conditions: e.g. vibration or thermal expansion
- · Connection system for solvent weld, threaded and flanged joints
- Patented SEAT STOP® ball carrier system that lets you micro-adjust seals and minimise the axial force effect
- · Easy radial dismounting allowing quick replacement of O-rings and ball seats without any need for tools
- PN16 True Union valve body made for rigid PVC-U injection moulding equipped with built-in bores for actuation. ISO 9393 compliant test requisites
- · Option of dismounting downstream pipes with the valve in the closed position
- · High surface finish stem with double O-Ring and double connection key to ball
- · Integrated bracket for valve anchoring
- Ball seat carrier can be adjusted using the **Easytorque adjustment kit**
- Actuation option: version with electric modulating actuator with 4-20 mA / 0-10 V inlet and 4-20 mA / 0-10 V outlet to monitor the
 position
- · Valve suitable for carrying fluids that are clean and free of suspended particles

