
DKOV - DIALOCK® 2-way diaphragm valve DN 15:65

DIALOCK[®] diaphragm valve with flanged monolithic body, drilled PN10/16. Face to face according to EN 558-1.



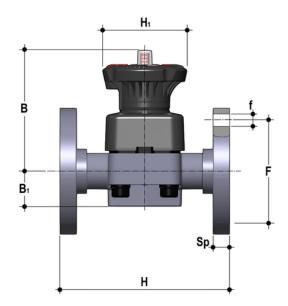

EPDM

Reference	d	DN	PN	В	B ₁	F	product.detail.attribute.Øf	Н	H ₁	U	Sp	g
DKOV020E	20	15	10	102	25	65	14	130	80	4	13.5	925
DKOV025E	25	20	10	105	30	75	14	150	80	4	13.5	990
DKOV032E	32	25	10	114	33	85	14	160	80	4	13.5	1054
DKOV040E	40	32	10	119	30	100	18	180	80	4	14	1272
DKOV050E	50	40	10	149	35	110	18	200	120	4	16	2164
DKOV063E	63	50	10	172	46	125	18	230	120	4	16	3009
DKOV075E	75	65	10	172	46	145	18	290	120	4	21	3610

FKM

Reference	d	DN	PN	В	B ₁	F	product.detail.attribute.Øf	H	H ₁	U	Sp	g
DKOV020F	20	15	10	102	25	65	14	130	80	4	13.5	925
DKOV025F	25	20	10	105	30	75	14	150	80	4	13.5	990
DKOV032F	32	25	10	114	33	85	14	160	80	4	13.5	1054
DKOV040F	40	32	10	119	30	100	18	180	80	4	14	1272
DKOV050F	50	40	10	149	35	110	18	200	120	4	16	2164
DKOV063F	63	50	10	172	46	125	18	230	120	4	16	3009
DKOV075F	75	65	10	172	46	145	18	290	120	4	21	3610



All information subject to change. Further information is available at: +49 621 486-0 | info.de@aliaxis.com | aliaxis.de



DKOV - DIALOCK® 2-way diaphragm valve DN 15:65

PTFE

Reference	d	DN	PN	В	B ₁	F	product.detail.attribute.Øf	н	Hı	U	Sp	g
DKOV032P	32	25	10	114	33	85	14	160	80	4	13.5	1054
DKOV040P	40	32	10	119	30	100	18	180	80	4	14	1272
DKOV050P	50	40	10	149	35	110	18	200	120	4	16	2164
DKOV063P	63	50	10	172	46	125	18	230	120	4	16	3009
DKOV075P	75	65	10	172	46	145	18	290	120	4	21	3610
DKOV020P	20	15	10	102	25	65	14	130	80	4	13.5	925
DKOV025P	25	20	10	105	30	75	14	150	80	4	13.5	990





DKOV - DIALOCK® 2-way diaphragm valve DN 15:65

- · High visibility graduated optical position indicator protected by a transparent cap with seal O-Ring
- · Customisation plate: the customisation lets you identify the valve on the system according to specific needs
- DIALOCK[®] SYSTEM: innovative handwheel with a patented immediate and ergonomic operating locking device that allows it to be adjusted and locked in over 300 positions
- Handwheel and bonnet in high mechanical strength and chemically resistant PP-GR, providing full protection by isolating all internal metal parts from contact with external agents
- Floating pin connection between the control screw and diaphragm to prevent concentrated loads, improve the seal and extend its lifetime
- New design of valve body interior: substantially increased flow coefficient and reduced pressure drop. The degree of efficiency reached has also enabled the size and weight of the valve to be reduced
- Adjustment linearity: the internal profiles of the valve also greatly improve its characteristic curve, resulting in extremely sensitive and precise adjustment along the entire stroke of the shutter
- Valve anchoring bracket integrated in the body, with threaded metal inserts allowing simple panel or wall mounting using the PMDK mounting plate (supplied as an accessory)
- · Connection system for solvent weld, threaded and flanged joints
- Optimised fluid dynamic design: maximum output flow rate thanks to the optimised efficiency of the fluid dynamics that characterise the new internal geometry of the body
- · Internal components in metal, totally isolated from the fluid and external environment
- Modularity of the range: only 2 handwheel and 4 diaphragm and bonnet sizes for 7 different valve sizes
- Non-rising handwheel that stays at the same height during rotation, equipped with a graduated optical indicator protected by a transparent PVC cap with seal O-Ring
- Bonnet fastening screws in stainless steel protected against the external environment by PE plugs. Absence of metal parts exposed to the external environment to prevent any risk of corrosion.
- CDSA (Circular Diaphragm Sealing Angle) system that, thanks to the uniform distribution of shutter pressure on the diaphragm seal, offers the following advantages:
- reduction in the tightening torque of the screws fixing the actuator to the valve body
- reduced mechanical stress on all valve components (actuator, body and diaphragm)
- easy to clean valve interior
- low risk of the accumulation of deposits, contamination or damage to the diaphragm due to crystallisation
- · operating torque reduction

