# SSE DN 65÷100



# EASYFIT TRUE UNION BALL CHECK VALVE





# SSE **DN 65÷100**


The SSE Easyfit check valve with spring loaded shutter developed with Giugiaro Design stands out for the innovative installation method that guarantees reliable service over time. This valve is also equipped with a customising Labelling System.



## **EASYFIT TRUE UNION BALL CHECK VALVE**

- Connection system for solvent weld and threaded joints
- Valve material compatibility (PVC-C) with water conveyance, drinking water and other food substances according to current regulations
- PN16 True Union valve body made for PVC-C injection moulding and European Directive 2014/68/EU (PED) compliant for pressurised equipment. ISO 9393 compliant test requirements
- Easy radial disassembly and fully interchangeable with VXE 65-100 valve models
- Union nut profile that perfectly adapts to the Easyfit multifunctional handle hooked insert (available as an accessory) that lets you control union nut rotation
- Can be **installed** in either a **vertical** or **horizontal** position

| Technical specifications |  |  |  |  |  |
|--------------------------|--|--|--|--|--|
| Construction             | Easyfit True Union spring check valve  |  |  |  |  |
| Size range               | DN 65 ÷ 100  |  |  |  |  |
| Nominal pressure         | PN 16 with water at 20° C  |  |  |  |  |
| Temperature range        | 0 °C ÷ 100 °C  |  |  |  |  |
| Coupling standards       | <b>Solvent welding</b> : EN ISO 15493, ASTM F 439, Can be coupled to pipes according to EN ISO 15493, ASTM F 441 |  |  |  |  |
|                          | <b>Thread</b> : ISO 228-1, EN 10226-1/2, ASTM F 437  |  |  |  |  |
| Reference standards      | Construction criteria: EN ISO 16135, EN ISO 15493  |  |  |  |  |
|                          | Test methods and requirements: ISO 9393  |  |  |  |  |
|                          | Installation criteria: DVS 2204, DVS 2221, UNI 11242   |  |  |  |  |
| Valve material           | PVC-C  |  |  |  |  |
| Seal material            | EPDM, FKM (standard size O-Ring)   |  |  |  |  |
| Spring material (SSE)    | Available in STAINLESS steel 316, A316 PTFE encapsulated   |  |  |  |  |

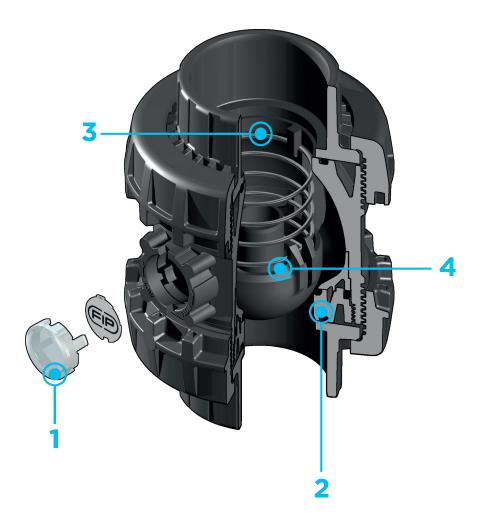

- Customisable Labelling System:
  built-in LCE module on the valve
  body made up of transparent
  protection plug and customisable
  tag holder using the LSE set
  (available as accessory). The
  customisation potential lets you
  identify the valve on the system
  according to specific needs
- 2 Locked ball seat carrier safe dismounting for maintenance with the Easyfit multifunctional handle
- Ideal for horizontal installations: perfect seal even with low back pressure. Silent and durable even with strong vibrations and

pulsating fluid

4 PVC-U shutter and springs available in STAINLESS Steel 316, A316 PTFE encapsulated: maximum reliability in a wide field of applications from salt water to aggressive acids


## TECHNICAL DATA

# PRESSURE VARIATION ACCORDING TO TEMPERATURE

For water and harmless fluids to which the material is classified as CHEM-ICALLY RESISTANT. In other cases, a reduction of the nominal PN pressure is required (25 years with safety factor). Note: When using PVC-C at working temperatures higher than 90°, it is advisable to first contact the service centre.



### PRESSURE DROP GRAPH

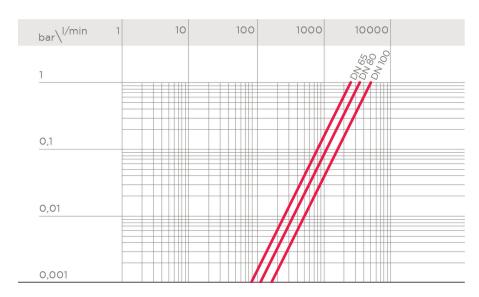

# K<sub>v</sub>100 FLOW COEFFICIENT

The  $\rm K_v 100$  flow coefficient is the Q flow rate of litres per minute of water at a temperature of 20°C that will generate  $\Delta p$ = 1 bar pressure drop at a certain valve position. The Kv100 values shown in the table are calculated with the valve completely open.

| MINIMUM VALVE           |  |
|-------------------------|--|
| <b>SEALING PRESSURE</b> |  |

The PVC-U SSE valve can only be used with liquids with specific weight under 1,37g/cm<sup>3</sup>.

| DN          | 65   | 80   | 100  |
|-------------|------|------|------|
| Kv100 I/min | 2586 | 3444 | 5093 |

| DN        | 65   | 80   | 100  |
|-----------|------|------|------|
| SSE (bar) | 0.08 | 0.08 | 0.08 |

The information in this leaflet is provided in good faith. No liability will be accepted concerning technical data that is not directly covered by recognised international standards. FIP reserves the right to carry out any modification. Products must be installed and maintained by qualified personnel.

# **DIMENSIONS**



## **SXEIC**

Easyfit ball check valve with female ends for solvent welding, metric series


| d   | DN  | PN |     | Н   |    |     | g    | EPDM code | FKM code  |
|-----|-----|----|-----|-----|----|-----|------|-----------|-----------|
| 75  | 65  | 16 | 157 | 211 | 44 | 123 | 2839 | SXEIC075E | SXEIC075F |
| 90  | 80  | 16 | 174 | 248 | 51 | 146 | 3597 | SXEIC090E | SXEIC090F |
| 110 | 100 | 16 | 212 | 283 | 61 | 161 | 6289 | SXEIC110E | SXEIC110F |



## **SXEAC**

Easyfit ball check valve with female ends for solvent welding, ASTM series


| d      | DN  | PN |     | Н   |      |     | g    | EPDM code | FKM code  |
|--------|-----|----|-----|-----|------|-----|------|-----------|-----------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 44,5 | 122 | 2839 | SXEAC212E | SXEAC212F |
| 3"     | 80  | 16 | 174 | 248 | 48   | 152 | 3597 | SXEAC300E | SXEAC300F |
| 4"     | 100 | 16 | 212 | 283 | 57,5 | 168 | 6289 | SXEAC400E | SXEAC400F |

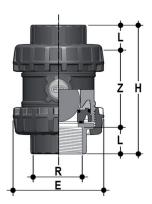

### SXENC

Easyfit ball check valve with female ends, NPT thread


|        | DN  | PN |     | Н   |      |       | g    | EPDM code | FKM code  |
|--------|-----|----|-----|-----|------|-------|------|-----------|-----------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 33,2 | 144,6 | 2839 | SXENC212E | SXENC212F |
| 3"     | 80  | 16 | 174 | 248 | 35,5 | 177   | 3597 | SXENC300E | SXENC300F |
| 4"     | 100 | 16 | 212 | 283 | 37,6 | 207,8 | 6289 | SXENC400E | SXENC400F |

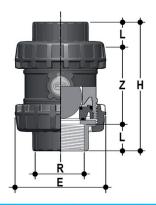

## **SXEFC**

Easyfit ball check valve with BSP threaded female ends

| R      | DN  | PN |     | Н   |      |       | g    | EPDM code | EPDM code |
|--------|-----|----|-----|-----|------|-------|------|-----------|-----------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 30,2 | 150,6 | 2839 | SXEFC212E | SXEFC212F |
| 3"     | 80  | 16 | 174 | 248 | 33,3 | 181,4 | 3597 | SXEFC300E | SXEFC300F |
| 4"     | 100 | 16 | 212 | 283 | 39,3 | 204,4 | 6289 | SXEFC400E | SXEFC400F |

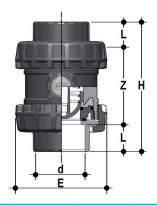


**SSEIC - A316 Spring**Easyfit spring check valve with female ends for solvent welding, metric series

| d   | DN  | PN |     | Н   |    |     | g    | EPDM code | FKM code  |
|-----|-----|----|-----|-----|----|-----|------|-----------|-----------|
| 75  | 65  | 16 | 157 | 211 | 44 | 123 | 2652 | SSEIC075E | SSEIC075F |
| 90  | 80  | 16 | 174 | 248 | 51 | 146 | 3365 | SSEIC090E | SSEIC090F |
| 110 | 100 | 16 | 212 | 283 | 61 | 161 | 5898 | SSEIC110E | SSEIC110F |



**SSEIC - A316/PTFE encapsulated Spring**Easyfit spring check valve with female ends for solvent welding, metric series

| d   | DN  | PN |     | H   |    |     | g    | EPDM code   | FKM code    |
|-----|-----|----|-----|-----|----|-----|------|-------------|-------------|
| 75  | 65  | 16 | 157 | 211 | 44 | 123 | 2652 | SSEIC075E0P | SSEIC075F0P |
| 90  | 80  | 16 | 174 | 248 | 51 | 146 | 3365 | SSEIC090E0P | SSEIC090F0P |
| 110 | 100 | 16 | 212 | 283 | 61 | 161 | 5898 | SSEIC110E0P | SSEIC110F0P |

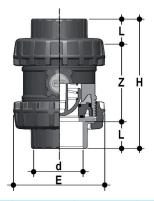


**SSEAC - A316 Spring**Easyfit spring check valve with female ends for solvent welding, ASTM series

| d      | DN  | PN |     | Н   |      |     | g    | EPDM code | FKM code  |
|--------|-----|----|-----|-----|------|-----|------|-----------|-----------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 44,5 | 122 | 2654 | SSEAC212E | SSEAC212F |
| 3"     | 80  | 16 | 174 | 248 | 48   | 152 | 3321 | SSEAC300E | SSEAC300F |
| 4"     | 100 | 16 | 212 | 283 | 57,5 | 168 | 5870 | SSEAC400E | SSEAC400F |



# **SSEAC - A316/PTFE encapsulated Spring**Easyfit spring check valve with female ends for solvent welding, ASTM series


| d      | DN  | PN |     | Н   |      |     | g    | EPDM code   | FKM code    |
|--------|-----|----|-----|-----|------|-----|------|-------------|-------------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 44,5 | 122 | 2654 | SSEAC212E0P | SSEAC212F0P |
| 3"     | 80  | 16 | 174 | 248 | 48   | 152 | 3321 | SSEAC300E0P | SSEAC300F0P |
| 4"     | 100 | 16 | 212 | 283 | 57,5 | 168 | 5870 | SSEAC400E0P | SSEAC400F0P |

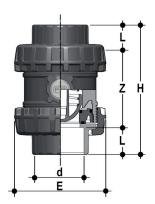

## **SSEIC**

True Union Check Valve Easyfit with metric plain socket ends for solvent welding

| d   | DN  | PN |     | H   |    |     | g    | EPDM code | FKM code  |
|-----|-----|----|-----|-----|----|-----|------|-----------|-----------|
| 75  | 65  | 16 | 157 | 211 | 44 | 123 | 2652 | SSEIC075E | SSEIC075F |
| 90  | 80  | 16 | 174 | 248 | 51 | 146 | 3365 | SSEIC090E | SSEIC090F |
| 110 | 100 | 16 | 212 | 283 | 61 | 161 | 5898 | SSEIC110E | SSEIC110F |

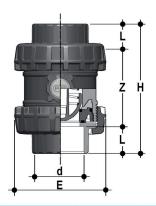


## **SSEAC**

True Union Check Valve Easyfit with ASTM plain socket ends for solvent welding

| d      | DN  | PN |     | Н   |      |     | g    | EPDM code | FKM code  |
|--------|-----|----|-----|-----|------|-----|------|-----------|-----------|
| 2" 1/2 | 65  | 16 | 157 | 211 | 44,5 | 122 | 2654 | SSEAC212E | SSEAC212F |
| 3"     | 80  | 16 | 174 | 248 | 48   | 152 | 3321 | SSEAC300E | SSEAC300F |
| 4"     | 100 | 16 | 212 | 283 | 57,5 | 168 | 5870 | SSEAC400E | SSEAC400F |

# **ACCESSORIES**

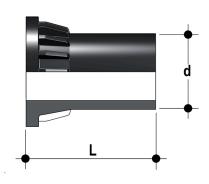

## **CVDE**

Long spigot PE100 end connectors for joints with electrofusion fittings or for butt welding

| d   | DN  | PN |     | SDR | Code         |
|-----|-----|----|-----|-----|--------------|
| 75  | 65  | 16 | 111 | 11  | CVDE11075    |
| 90  | 80  | 10 | 118 | 11  | CVDE11090VXE |
| 110 | 100 | 10 | 127 | 11  | CVDE11110VXE |



## **EASYFIT HANDLE DN 65÷100**

Easyfit multifunctional handle for union nut tightening SXE-SSE DN 65÷100

| d   | DN  | Code     |
|-----|-----|----------|
| 75  | 65  | HSVXE075 |
| 90  | 80  | HSVXE090 |
| 110 | 100 | HSVXE110 |



### LSF

Customisation and label printing set for Easyfit handle made up of precut adhesive sheets and software for guided label creation.

| d   | DN  | SXE - SSE<br>code |
|-----|-----|-------------------|
| 75  | 65  | LSE063            |
| 90  | 80  | LSE063            |
| 110 | 100 | LSE063            |

## **CUSTOMISATION**



SSE DN 65÷100 Easyfit valve is equipped with a customisable Labelling System. This system lets you create special labels to affix to the valve body. This makes it extremely easy to apply company logos, identification serial numbers or service indications such as, for example, the valve function in the system, the transported fluid, but also specific information for customer service, such as the customer name or installation date or location on the valves.

The specific LCE module is a standard supply and is made up of a rigid transparent water-resistant PVC plug and white tag holder made of the same material, one side of which bears the FIP logo.


The holder, inserted in the plug, can be removed and, once overturned, used for customisation by applying labels printed with the software supplied with the LSE set.

Proceed as follows to apply the label on the valve:

- 1) Remove the transparent plug from the housing on the valve body.
- 2) Extract the tag holder from the transparent plug.
- 3) Apply the adhesive label on the holder to align the profiles matching the tab position.
- 4) Reinsert the tag holder in the transparent plug so that the label is protected against the elements.
- 5) Replace the transparent plug in its seat on the valve body.

# **COMPONENTS**

## **EXPLODED VIEW**

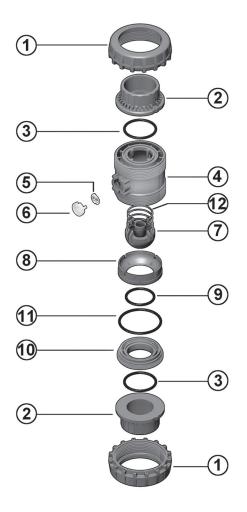

- 1 Union nut (PVC-C 2)
- 2 End connector (PVC-C 2)
- Socket seal O-Ring (EPDM, FKM 2)
- 4 Body (PVC-C 1)

- 5 Tag holder (PVC 1)
- Transparent protection plug (PVC 1)
- 7 Shutter (PVC-C 1)
- 8 Gland packing ring (PVC-C 1)
- Shutter gasket (EPDM, FKM 1)
- 10 Shutter seat O-ring (PVC-C 1)
- 11 Radial seal O-Ring (EPDM,FKM 1)
- 12 Spring (STAINLESS steel\* 1)

The component material and quantity supplied are indicated in the parentheses.

## **DISASSEMBLY**

In the event of leaks or wear, before performing maintenance, cut-off fluid upstream from the valve and make sure it is de-pressurised (downstream drain if necessary).

- 1) Fully drain residual liquid that could be aggressive for the operator and, if possible, circulate water to internally clean the valve.
- 2) For easy union nut tightening in assembly, use the Easyfit multifunctional handle (supplied as an accessory).
- 3) Unscrew the ball seat carrier (10) with the Easyfit multifunctional handle: introduce the two protrusion on the top of the handle in the grooves in the carrier (10) and unscrew, extracting it counter-clockwise.
- 4) Remove all internal components.

## **ASSEMBLY**

- 1) Reconstruct the valve following the exploded view on the previous page.
- 2) Tighten the ball seat carrier (10) using the Easyfit multifunctional handle. This ensures optimal valve installation and operations (fig. 3).
- 3) Position the valve between the end connectors (2) and tighten the union nuts clockwise (1) using the Easyfit multifunctional handle (fig. 7) being sure the socket seal O-ring (3) does not exit the seats.



**Note:** during assembly operations, it is advisable to lubricate the rubber seals. Mineral oils are not recommended for this task as they react aggressively with EPDM rubber.





Fig. 2



Fig. 3



Fig. 4



## INSTALLATION

SSE valve can be installed both vertically (upward flow) and horizontally. Before proceeding with installation, please follow these instructions carefully:

- 1) Check that the pipes to be connected to the valve are aligned in order to avoid mechanical stress on the threaded joints.
- 2) Unscrew the union nuts (1) from the body (4) and insert them in the pipe segments.
- 3) Solvent weld or screw the end connectors (2) onto the pipe segments.
- 4) Position the valve body between the end connectors (fig. 1).
- 5) Place the union nuts on the valve body and start tightening manually clockwise until they are hard to turn. Do not use wrenches or other tools that can damage the union nut surface (fig. 2).
- 6) For easy union nut tightening in assembly, use the Easyfit multifunctional handle (supplied as an accessory).
- 7) Extract the hooked insert in the handle (fig. 5) overturn it and fit it in the seat on the lower part of the handle (fig. 6).
- 8) Fit the tool on the external union nut profile until firmly and safely secured that allows for adequate torque without damaging the union nut in any way (fig. 7).
- 9) Repeat point 7 for the other union nut.
- 10) When tightened, remove the hooked insert and replace it in its seat in the handle.
- 11) If necessary, support the pipe with FIP pipe clip model ZIKM and DSM distance



Do not use compressed air or other gases to test thermoplastic lines.

Always avoid sudden closing manoeuvres and protect the valve against accidental manoeuvres.

Leave a straight section of pipe of length equal to 5 times the nominal diameter before and after the valve





Fig. 6



Fig. 7



